

Hannay Reels, Inc. 553 State Route 143, Westerlo, NY 12193 www.hannay.com Email: reels@hannay.com Phone 1-518-797-3791 Toll Free 1-877-GO-REELS (467-3357) Fax 1-800-REELING (733-5464) Int'l Fax 1-518-797-3259

TSB 2018.03.001

Utility & FH Roller Types and Locations

Date Issued: March 2018

ASSEMBLY "A", "B" & "C" ROLLERS

ASSEMBLY "A2", "B2" & "C2" ROLLERS



A & A2 ROLLERS

Used to prevent hose from going over the discs and prevent hose from rubbing on frame.





B & B2 ROLLERS

Guides Hose while allowing hose to come off the front or back of reel.






C & C2* ROLLERS

Fully captivated hose guide additionally allowing use of a hose stop.




*NOTE: "C2" rollers direct the hose toward the drum reducing the likelihood of the hose rubbing on the frame causing damage to the hose.

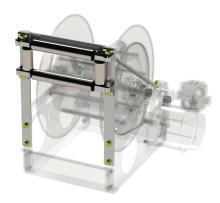

C2 rollers shown in Top Wind position:

Used on RT and LT reels keeps the hose high relative to the reel.

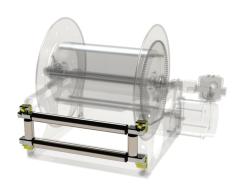

C2 Rollers shown in Bottom Wind position:

Used on RB and LB reels keeps the hose low relative to the reel.



C2 Rollers shown in Vertical Wind position:

Used on RB and LB reels.
Primarily used when the reel
hangs from above to direct the
hose down to the user or mounted
on a wall with horizontal payout.

TSB 2018.03.001 Utility & FH Roller Types and Locations

FH-3 ROLLERS



Standard FH Rollers allow front and rear mounting.
Curved rollers contour to the hose.

FH-3 DOUBLE CAPTIVE ROLLERS




Fully captivated hose guide allowing use of a hose stop. Curved rollers contour to the hose.



FH Rollers in Bottom Wind position:

Used on RB and LB reels keeps the hose low relative to the reel.

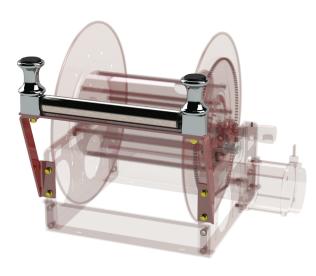

FH Rollers in Top Wind position:

Used on RT and LT reels keeps the hose high relative to the reel.