


Part # 99 17.0025 Standard Duty 12V Solenoid

Terminal 1
(connect to battery and circuit breaker and to switch side 1)

Terminal 3
(connect to motor wire depending on rotation direction)

Terminal 2
(switch side 2)

Connect mounting plate to ground

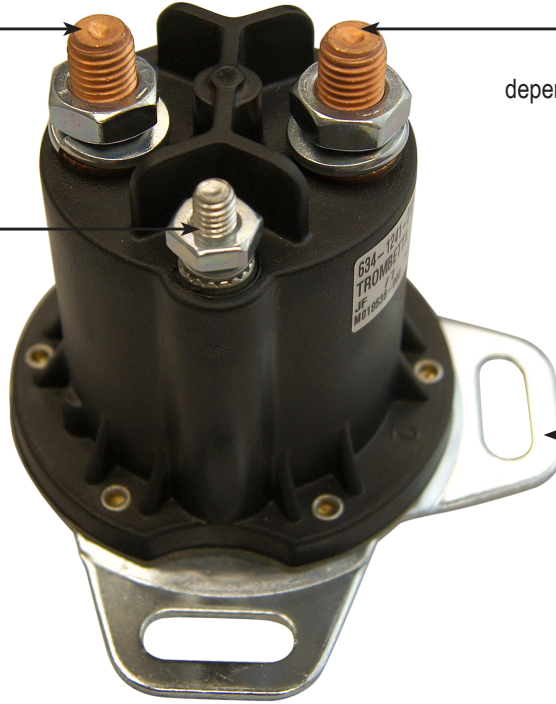

Part # 99 17.0027 Weather-Proof 12V Solenoid

Terminal 3
(connect to Ground)

Terminal 2
(switch side 2))

Terminal 4
(connect to motor wire depending on rotation direction)

Terminal 1
(connect to battery and circuit breaker and to switch side 1)

