


553 State Route 143 • Westerlo, NY 12193 • Toll Free (877) GOREELS (467-3357) • FAX (800) REELING (733-5464)
 www.hannay.com • reels@hannay.com

NOTE: For schematic parts listing, please refer to Hannay parts list ISO-115 (Utility Hose Rollers).

STEP 1: Install the two vertical "legs" of the bracket with four 3/8" bolts and nuts as shown in FIGURE 1.


Note that the notches in the side brackets need to go towards the INSIDE of the reel. The motor chain guard will interfere with one of the vertical brackets if the notch is not positioned correctly.

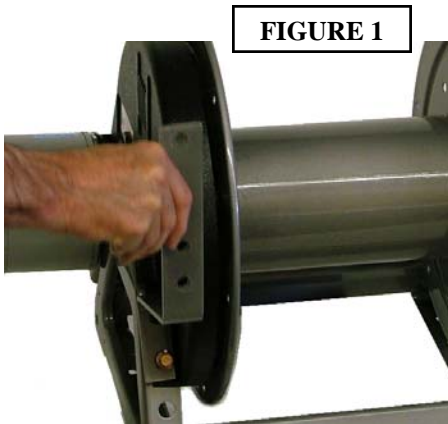

STEP 2: As shown in FIGURE 2, attach the right-hand "L" bracket to the right-hand vertical bracket and tighten with two 3/8" bolts and nuts.

Now repeat this step for the left-hand "L" bracket.

Please note that the bracket leg with 2 holes is the vertical leg, and the leg with 3 holes is the horizontal top leg.

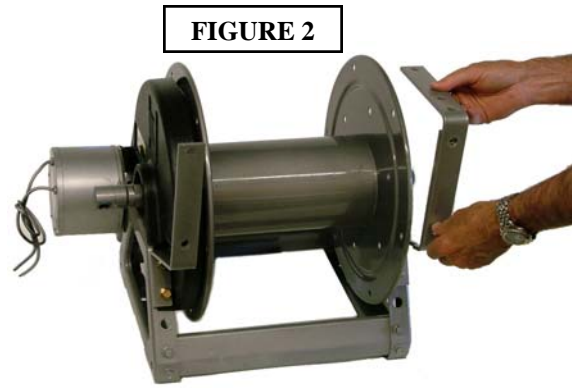


STEP 3: Loosely attach the 4 chrome-plated corner blocks with the provided 3/8" hardware as shown in FIGURE 3.

For an Assy. "C" roller, the 4 blocks are identical. For an Assy. "C2" roller, 2 of the blocks are marked "L" and the other 2 blocks are marked "R". See FIGURE 4 for correct positioning of blocks.

Now insert the 4 SST rollers (with provided rods and bushings) into the corner blocks one at a time. When all 4 rollers are positioned correctly, align and tighten up the corner blocks.

Note that there will be unused mounting holes when you are finished. This is because we provide two different vertical roller lengths. Just use the appropriate mounting holes for the rollers that have been provided to you in the kit.

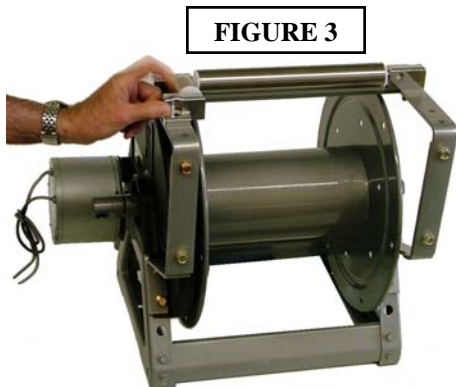

Assembly "C" Roller (Complete with Vertical Rewind Mounting Bracket) shown below in FIGURE 4.

