



**Hannay Reels®**  
*The reel leader.*

Hannay Reels, Inc.  
553 State Route 143, Westerlo, NY 12193  
www.hannay.com  
Email: reels@hannay.com

Phone 1-518-797-3791  
Toll Free 1-877-GO-REELS (467-3357)  
Fax 1-800-REELING (733-5464)  
Int'l Fax 1-518-797-3259

# TSB 2025.06.001

## TRAPEZOID FRAME STACKING KIT INSTALLATION

*For 1500 & 1800 Series  
Manual or Power Rewind Reels*

*Date Issued: June 2025*

**NOTE: A MAXIMUM OF TWO REELS CAN BE USED PER STACKING KIT.  
ONE STACKING KIT CANNOT BE INSTALLED ON TOP OF ANOTHER KIT.  
THE WARRANTY WILL BE VOIDED IF GUIDELINES ARE NOT FOLLOWED.**

### TO BE USED FOR 1500 & 1800 SERIES REELS:

#### Universal Kit (22.5" Depth): For Both Power & Manual Reels

- Steel: P/N 99 08.1061
- Stainless Steel: P/N 99 08.1065

#### Manual Kit (18" Depth): Manual Reels Only

- Steel: P/N 99 08.1071
- Stainless Steel: P/N 99 08.1075

### IMPORTANT NOTES:

- When ordering the stacking kit, you **must specify** the model number of the reels to be used with the kit to ensure the correct length X-bracing is provided.
- The top and bottom reels must be the same width.
- The included X-bracing is installed on **rear** of frames.

### INSTALLATION INSTRUCTIONS:

- The stacking kit is shipped loose from the factory. The customer is responsible for assembling the stacking kit to a rigid mounting surface.
- The stacking frames should be orientated so the hardware for mounting the bottom reel is easily accessed. The open-ended area of the foot of the stacking frame should be facing outward (see **FIGURE 1**). *Where space is limited, the open-ended area of the foot can face inward, however the hardware to mount the reel will not be easily accessible.*
- Rollers can be added directly to the stacking frames for the bottom reel (see **FIGURE 2**). If rollers are desired for the top reel, the roller brackets to be mounted on the reel must be ordered with the rollers. Alternatively, the rollers could be specified to be installed with the top reel from the factory when ordering.


**STEP 1:** It is recommended to loosely assembly the two side frames of the stacking kit with the X-bracing to the rear, do not secure the sides frame to the mounting surface at this point.

**STEP 2:** Install the bottom reel in appropriate location on the foot. On Universal Kits the power rewind reels should be installed in the set of slots that are closest to the front of the kit. The center slot is for a manual rewind reel that does not have a motor.


**STEP 3:** Install the top reel on the top of the stacking frame side frames. The top reel can go in any of the provided slots, regardless of power or manual Rewind.

**STEP 4:** Tighten the X-bracing hardware.

**STEP 5:** Secure the stacking kit side frames to the mounting surface

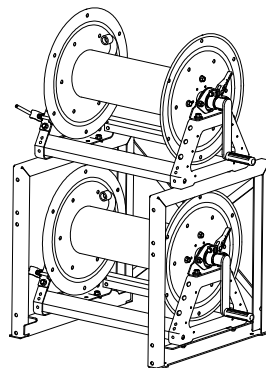

Front View of Manual Reels  
on Universal Kit

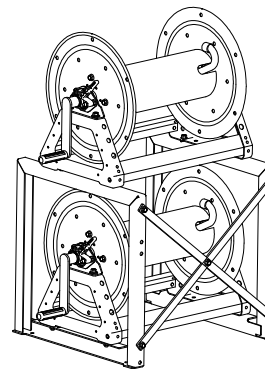

Rear View of Manual Reels  
on Universal Kit



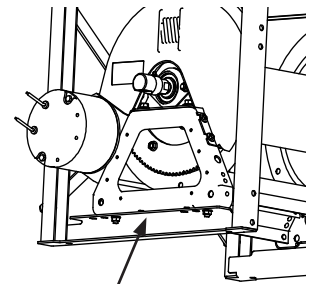


FIGURE 1: Open-end mounting  
brackets should face outward

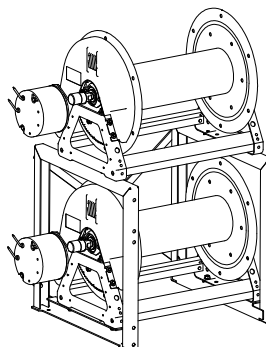

Front View of Power Reels  
on Universal Kit

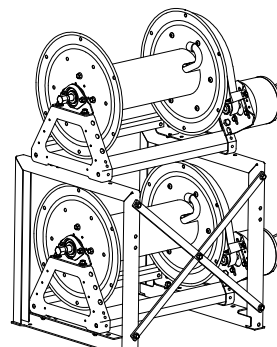

Rear View of Power Reels  
on Universal Kit

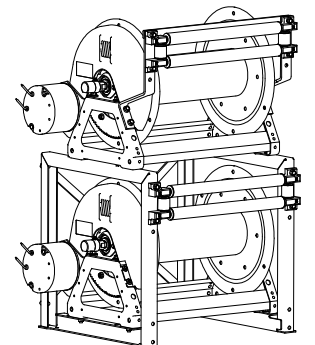


FIGURE 2: Stacked reels shown  
with optional rollers